PYLE®

PLVW8M

OWNER'S MANUAL

TFT MONITOR

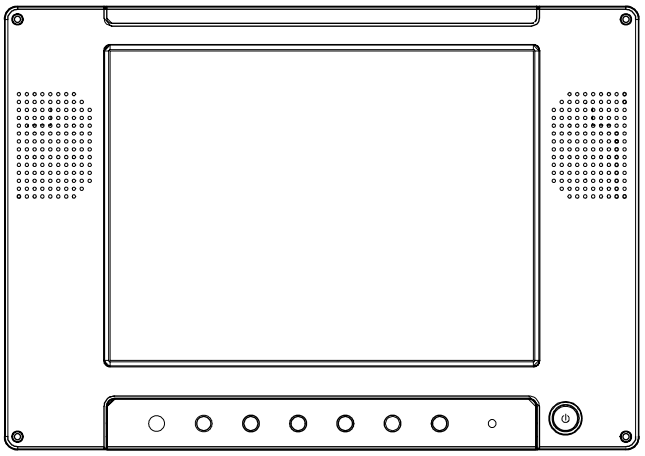

www.pyleaudio.com

INSTALLATION

The monitor (Fig.1) can be installed on the bracket (Fig.2). You can mount the unit according to the following steps.

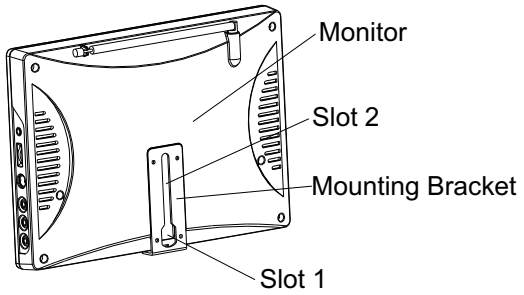

Fig.1

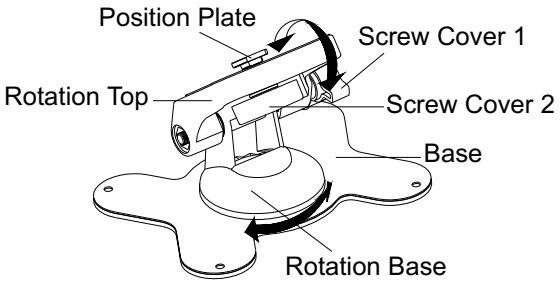

Fig2.

1. Insert the position plate on the bracket into the slot 1 on the mounting bracket. Then slide the position plate upward to the slot 2 and select the proper location. Then rotate the screw cover 2 to fix the monitor on the bracket.
2. When mounting the monitor on the bracket, you can release the screw cover 1 to turn the rotation top upward or downward to find a good viewing angle, then rotate the screw cover 1 to fix the rotation top.
3. The monitor can be rotated leftward or rightward by rotating the rotation base.
4. On the bottom of the base, there is a layer of magic tape. When you remove the protective paper, you can stick the unit to the desired location of your vehicle system. Be sure that the mounting surface is clear and dry.

ELECTRICAL CONNECTION

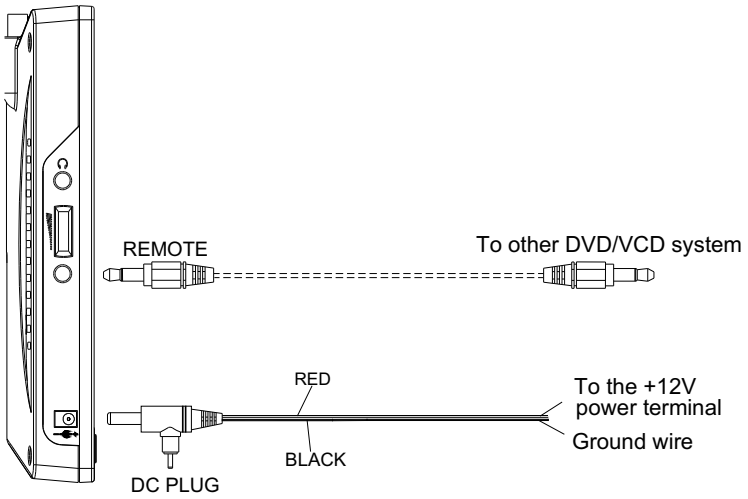

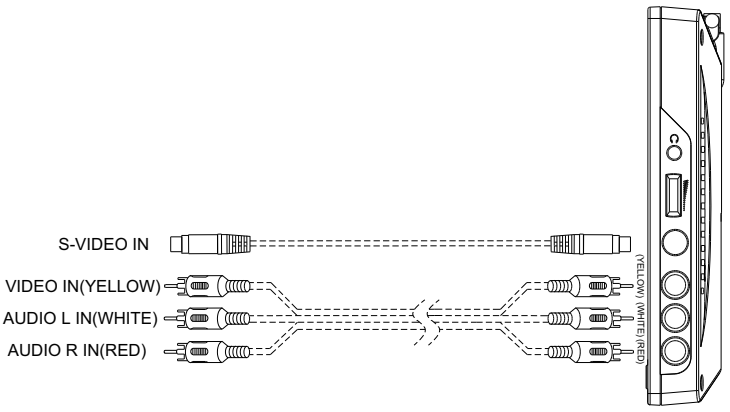

LOCATION AND FUNCTION OF KEYS

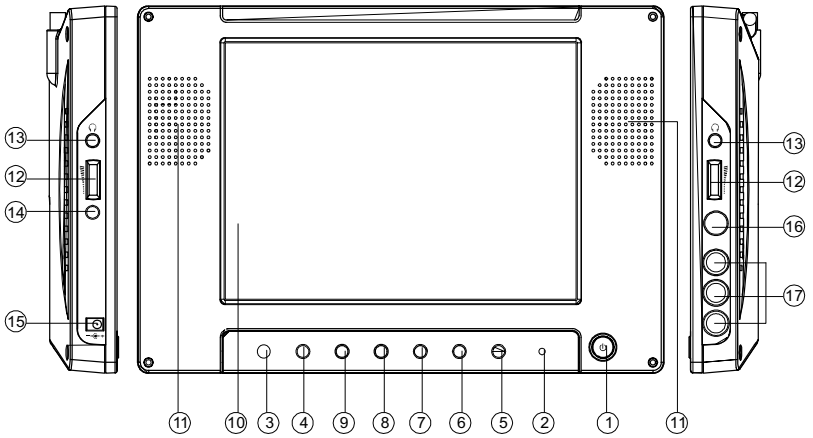

1. ⏻ (Power Button)
2. Power Indicator Light
3. IR (Remote Sensor)
4. MENU
5. MUTE
6. VOLUME+
7. VOLUME-
8. PICTURE+
9. PICTURE-
10. 8 inch color TFT LCD
11. Speakers
12. Volume Knob
13. 🎧 Jacks for Earphone
14. REMOTE Jack
15. DC 12V Input Jack
16. S-VIDEO Jack
17. AV IN Jacks

LOCATION AND FUNCTION OF KEYS

1. ⏻ **(Power)**
   Press ⏻ button (1) to turn on/off the unit.
2. **POWER INDICATOR LIGHT**
   When the system is on, the indicator light (2) will be illuminated.
3. **REMOTE SENSOR**
   For option, the monitor can be supplied with the remote control according to the user's need. Through the remote sensor **IR** (3), you can use the remote control to execute TV operation conveniently.
   If there is a VIDEO/AUDIO system connecting to the monitor through the REMOTE jack (14) and AV INPUT jacks (17), through the remote sensor **IR** (3), you can use the corresponding remote control supplied with the VIDEO/AUDIO system to control the VIDEO/AUDIO system.
4. **MENU**
   Press the **MENU** button (4) to show the menu on the display (10), repeatedly press **MENU** button (4) to select among Bright, Contrast, Color, Tint (For the unit with NTSC system) items.

(For the unit with NTSC system):

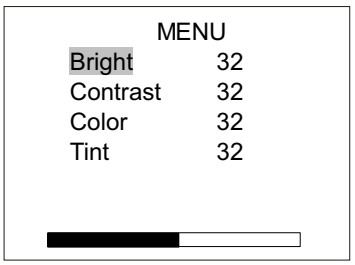

   Press **PICTURE+** button (8) or **PICTURE-** button (9) to increase or decrease the level of the corresponding item.

5. **MUTE**
   Press **MUTE** button (5) to mute the sound. Press the button again, the screen will display the AUDIO level setting value of the TV unit for several seconds. Then you can adjust the volume level by **VOLUME+** (6) and **VOLUME-** (7) buttons.
6. **VOLUME+**
   Press the **VOLUME+** button (6) to choose channel upward.
7. **VOLUME-**
   Press the **VOLUME-** button (7) to choose channel downward.
8. **PICTURE+**
   Press the **PICTURE+** button (8) to increase the volume level of the speaker.
9. **PICTURE-**
   Press the **PICTURE-** button (9) to decrease the volume level of the speaker.

LOCATION AND FUNCTION OF KEYS

10. **TFT LIQUID CRYSTAL DISPLAY**
    The 8 inch TFT color LCD (10) can show the current state of the unit.
11. **SPEAKER**
    There are two speaks (11) on the front of the monitor. The sound can be sent from the speakers if the unit isn't connected with earphone.
12. **EARPHONE VOLUME CONTROL KNOB**
    Slide the knob (12) to change the volume of the earphone.
13. **JACKS FOR EARPHONE**
    There are two jacks (13) for earphone. You can connect earphone to any one of the jacks to receive sound signal.
14. **REMOTE**
    Through the **REMOTE** jack (14), connect other VIDEO/AUDIO system to the monitor. Then you can control the VIDEO/AUDIO system by pointing the remote control directly to the remote sensor **IR** (3).
15. **DC 12V INPUT JACK**
    Through this jack (15), provide DC 12V power supply to the unit.
16. **S-VIDEO JACK**
    The jack (16) is used for S-VIDEO input.
17. **AV INPUT JACK**
    The group of jacks (17) is used for VIDEO in, AUDIO R in and AUDIO L in.

TROUBLE SHOOTING

Before going through the checklist, check wiring connection. If any of the problems persist after checklist has been made, consult your nearest service dealer.

NO POWER

- Check if the power button on the front of the monitor is set to on.
- Check if the wires of DC power plug are properly connected.
- Check if there is power at the power supply outlet.

THE PICTURE IS OVER DARK, OVER BRIGHT OR HAS NO COLOR:

- Press **MENU** button on the front of the unit, then press **PICTURE+** button or **PICTURE-** button to increase or decrease the level of the corresponding item (BRIGHT, CONTRAST, COLOR or TINT) to proper value, then you can get an optimum picture effect.

NO SOUND

- Check if the audio connections are properly connected.
- Check if the volume is minimum, and press the VOLUME+ button to increase the volume level.

CAN'T RECEIVE TV SIGNAL OR THE PICTURE QUALITY IS POOR IN TV MODE:

- Please confirm if the antenna is connected to the antenna socket of the unit.
- Check if you have pulled out the antenna.
- Perhaps the signal of your position is too weak, and it can't receive any TV signal at all.

BUTTONS DO NOT WORK

- Turn the unit off and on with the power button on the front of the unit.

BRACKET 3 (BKT3)

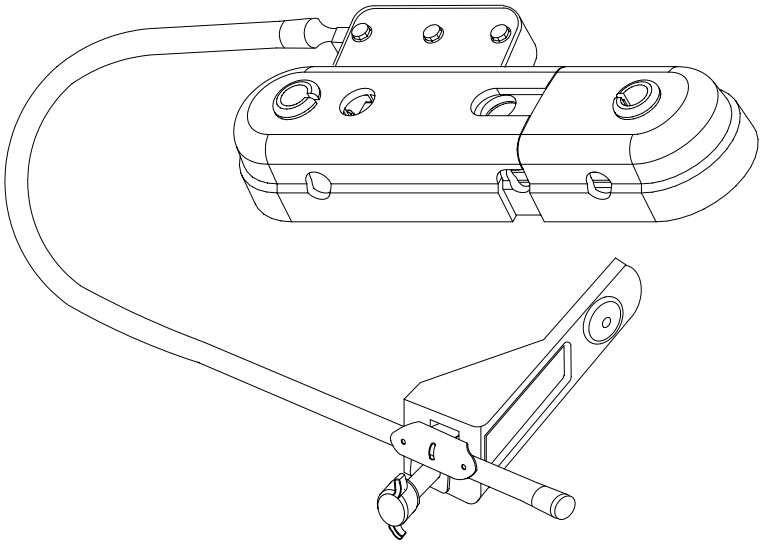

INSTALLATION HARDWARE

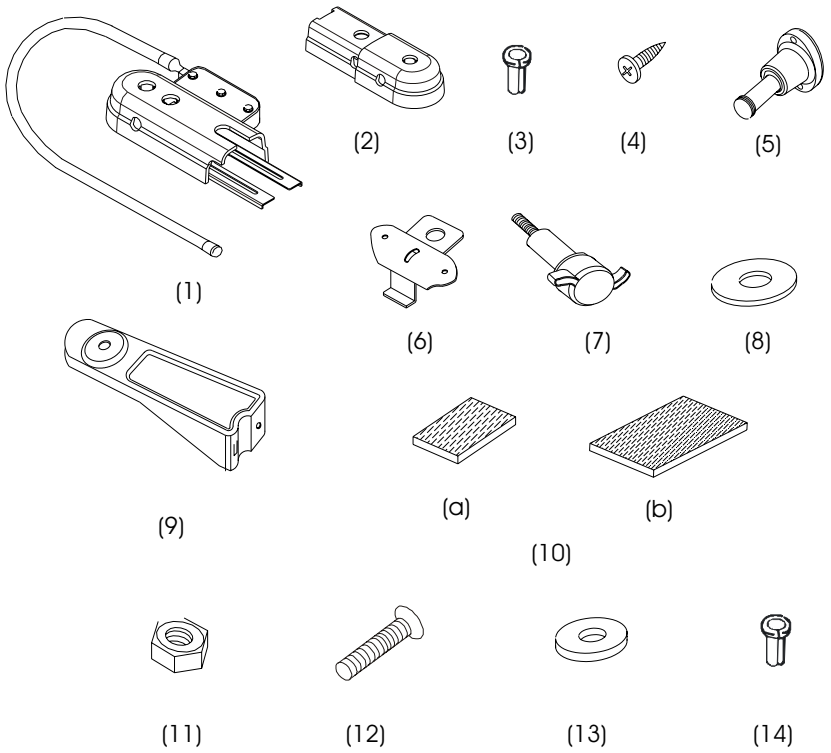

(1) ASSY (Rotate combined bracket with Base A.....1
(2) Base B.....1
(3) Plastic tube (ϕ13mm) 2
(4) Screw (ϕ3x10).....4
(5) Clip screw 1
(6) Fastener 1
(7) Fix bolt 2
(8) Washer (a) (3mm thick).....1
(9) Tray 1
(10)sponge (a) 1
(10)sponge (b) 1
(11)Hex nut 1
(12)Bolt 1
(13)Washer (b) (7mm thick).....1
(14)Plastic tube (ϕ16mm) 2

INSTALLATION

1. Press the switch under the headrest of the car seat and pull out the headrest.

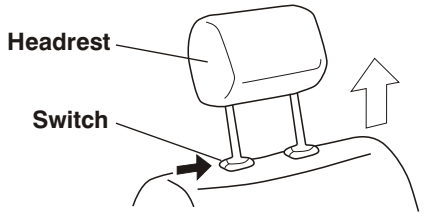

2. Combine the base B (2) and the base A with steel ripple pipe (1), then place them on the poles of the removed headrest to select proper hole position to install the base.

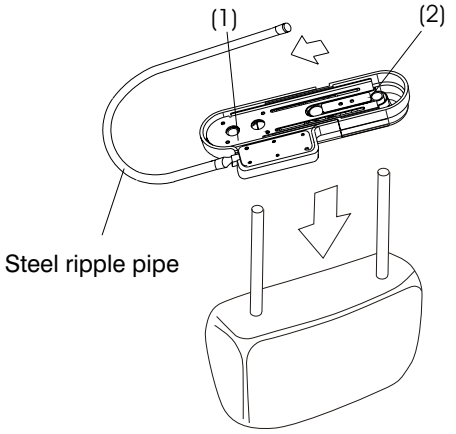

3. Remove the Base from the headrest and loosen the two screws by using the screwdriver, then according to the size of the poles, place the two plastic tubes (ϕ13mm) (3) or plastic tubes (ϕ16mm) (14) on the holes that you just selected, then adjust them to proper position as shown in diagram below.

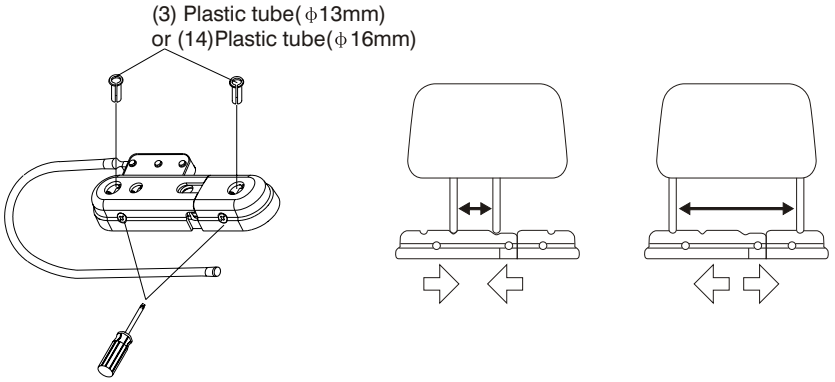

INSTALLATION

4. Place the Base on the poles of the removed headrest in good position, and then use four screws (3x10 (4) to fix the base A and base B.

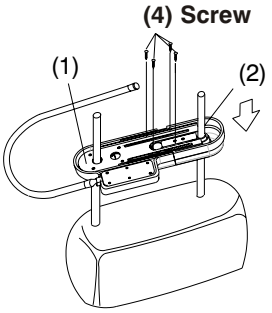

5. Install the headrest with the Base to the car seat in proper position, then use the screwdriver to rotate the two screws tightly to fix the base.

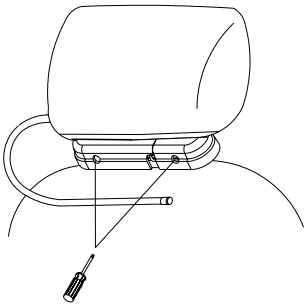

6. Use the fix bolt (7) and the fastener (6) to install the tray(9) to the steel ripple pipe. Before installing the tray, stick the smaller quadrate sponge (a) to the tray and stick the larger quadrate sponge (b) to the inner side of the fastener according to the arrow in the figure below, Doing this can ovoid scraping the steel ripple pipe.

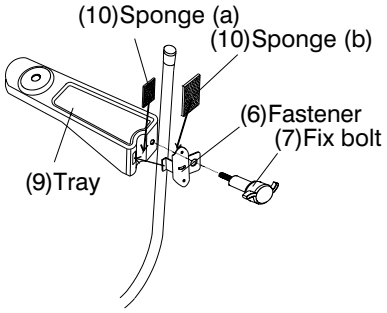

INSTALL THE TV MONITOR OR THE CAMERA

1. INSTALL THE TV MONITOR
   Insert the clip screw (5) into the hole on the tray with the washer (a) (8) between the clip screw (5) and the tray. Then aim the clip screw to the hole on the bottom of the TV monitor and rotate the clip screw to fix the TV monitor to the tray.
   You can also use the fix bolt (7) replacing the clip screw (5) to install the monitor.

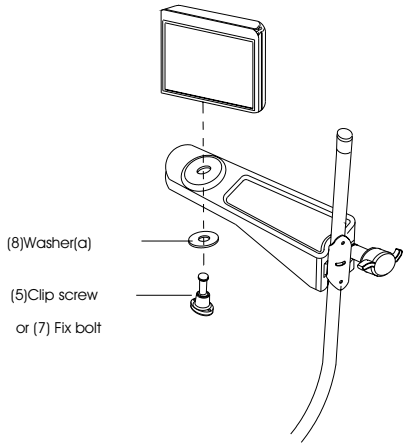

2. INSTALL THE CAMERA
   Install the camera to the tray like the TV monitor installation above. Aim the clip screw to the hole on the bottom of the camera and rotate the clip screw to fix the camera to the tray.

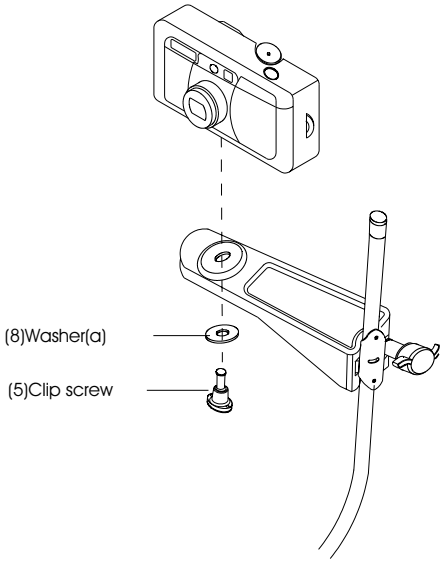

ADJUST THE ANGLE OF THE TV UNIT OR THE CAMERA

1. Rotate the clip screw to loosen the TV monitor or the camera, then rotate the TV monitor or the camera left or right to your need for good viewing angle and then rotate the clip screw tightly to fix the TV monitor or the camera.

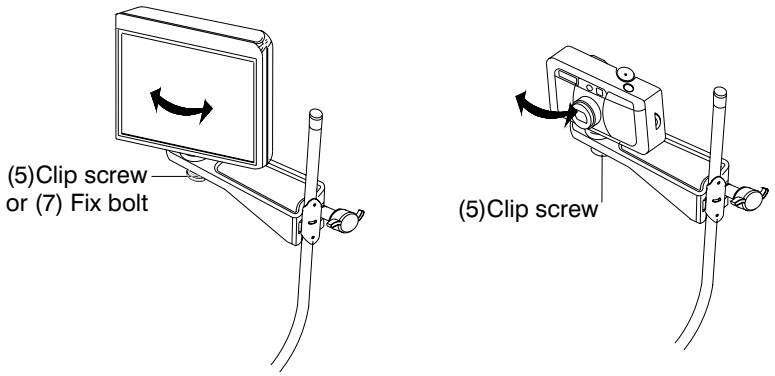

2. The steel ripple pipe can be bent to get the TV monitor or the camera in the proper position that your need.

ADDITIONAL MATERIAL EXPLANATION

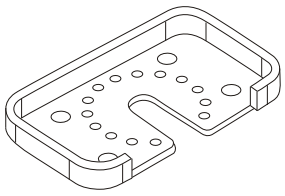

(1)

(2)

(1) Position plate.....1
(2) Screw.....4

If the TV monitor is supplied with the root plate for the bag installation, when it changes to be installed by the unit BKT3, you must remove the six screws by using the screwdriver to uninstall the root plate on the back of the monitor and use four screws (2) to install the position plate (1) to the bottom of the monitor, as shown below.

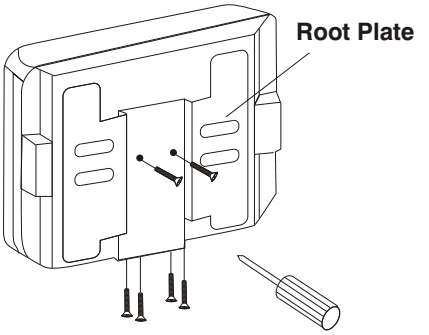

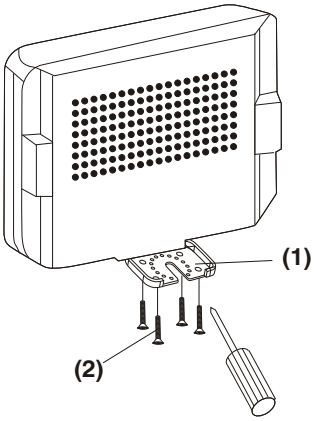

www.pyleaudio.com